Portable Audio with LED Lighting
User Manual

podio®

Included in the Box
- MP3 bike audio with LED light
- 3.5 mm / USB cable
- bicycle handlebar bracket

Device Features
- The patented Cavity Indirect Sound Technology makes it possible to align the LED flashlight and the loudspeaker in the same direction such that users can easily use the flashlight and enjoy the audio at the same time.
- Independently operated system with four levels using a LED cycling switch.
- The high quality aluminum case is suitable for both indoor and outdoor environments.
- The product uses the high beam LED made by CREE, an U.S.A. based company.
- The internal Japanese FOSTER Hi-Fi speaker produces excellent sound quality in both indoor and outdoor settings.
- With the special µAmp. design, the speaker output quality will not decay during the life of battery.
- The internal rechargeable long-life Li-ion battery provides for extended use in outdoor settings.
- When the earphone is plugged in, the device switches from the speaker to the earphone automatically.
- Incorporating the USB, charging and earphone inputs into one jack results in an elegant appearance.
- The battery status is indicated by a tricolor LED indicator: Green, Red, or Orange indicating the status of battery is at full charge, low charge, or in between.
- The device supports MP3/WMA format.
- The device supports button-tones.

Product Specifications

Model Name	LA-306
LED	CREE 1W White 100Flux(lm)
LED Mode	High beam(1W)、low beam(0.5W)、flashing、OFF
Speaker output	THD+N=0.18% @ 1.5W SNR=94db @ 1.5W
Earphone output	THD+N=0.01% @ 32 Ω SNR = 94 db @ 32 Ω
Flash Light Maximum Usage	Low beam ONLY：9 hours High beam ONLY：4 hours High beam and playing music with speaker：3 hours Playing music with speaker ONLY：9 hours Playing music with earphone ONLY：60 hours
Charging time	USB: 6 hours USB(5V/1A) A/C commercial adaptor: 4 hours
Capacity	2GB
Interface	USB 2.0 High speed
File system	FAT16 / FAT32
Music format	MP3 / WMA (Below 384 kbps)
Temperature	Function within -10℃ ~ 50℃
Dimension	112(L) x 33.2(Ø)mm
Weight	147g

Buttons Function

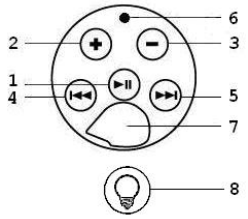

1. POWER On or Off, and Play or Pause
2. VOLUME Increase
3. VOLUME Decrease
4. SKIP Backward
5. SKIP Forward
6. LED Tri-color Indictor: Green, Red or Orange
7. Shared Earphone/POWER/USB 3.5mm input with cover
8. LED flashlight switch

Charging the Device
- The device needs to be fully charged before its initial use.
- To charge the battery, use the 3.5mm/USB cable.
- Attach the 3.5mm connector at one end of the cable to the device and the USB at the other end to a computer.
- When a USB commercial A/C adaptor is used, attach the 3.5mm connector at one end of the cable to the device and the USB at the other end to the USB connector of the A/C adaptor. Plug the AC adaptor into an electrical outlet.
- The LED indicator will be Red during charging, and it will be Green when the device is fully charged.
- The device will shut off automatically when the USB cable is disconnected (including during charging or data transmission).
- Do not use the LED flashlight during charging or when connecting it to a computer using the USB cable.

Downloading Music
- Connect the device to a computer through the USB cable. The device can then be operated as a flash drive for downloading music.
- It is recommended to create separate folders for a variety of music and for easy access and downloading.
- The WMA format supports Window Media Audio up to and including version 9. It does not support “Digital Right Management (DRM)” format.

Instructions for Playing Music
1. Power on : Pressing the ▶|| button lightly, the device will play song automatically after the LED indicator stays Orange for approximately 5 seconds.
2. Power off : Pressing the ▶|| button for about 4 seconds, the LED indicator will flash rapidly and go out and the device is turned off.
3. Pause: Pressing the ▶|| button lightly during playing will cause the LED indicator to stay on and the player will enter the “Pause” mode. Pressing the ▶|| button lightly again will return the player to normal play status. Please note that the system will turn itself off automatically after 3 minutes in "Pause" mode.
4. Change songs during the playing:
   - If you press the ⏭ button lightly, the device will skip to the next song.
   - If you press the ⏮ button lightly, the song will play again if the song has been played for more than 5 seconds, otherwise, the device will choose the previous song.
   - If you press the ⏭ button twice quickly, the device will skip to the next folder.
   - If you press the ⏮ button twice quickly, the device will skip to the previous folder.
   - If you press the ⏭ button for about 3 seconds, the LED indicator will flash rapidly 4 times, the device will skip to the first song and play the songs in sequence.
5. Playing mode: (Sequential Play or Shuffle Play)
   The default mode of playing is set to “Sequential Play”. To change to “Shuffle Play”, press the ⏮ button for about 3 seconds. To change back to the “Sequential Play”, press the ⏮ button for about 3 seconds again.
6. Sleep mode: While playing, press the ▶|| button 6 times quickly within 10 seconds (An obvious playing or pause of the music is an indicator of an effective pressing), the flash pattern of the LED indicator will change and the device will enter the sleep mode. About 30 minutes later, the volume will decrease about half. About another 30 minutes later, the device will turn itself off automatically. To release from the sleep mode, press the **+** or **–** button.

Instructions for Using LED Flashlight
- The LED flashlight switch has four cycling mode: high beam, low beam, flashing mode, and off.

The LED Indicator
- The LED indicator will flash once every 2 seconds when the device is playing normally.
- The LED indicator will illuminate for 2 seconds and go out for 2 seconds continuously when no music has been downloaded onto the device.
- The LED indicator will change from Orange to Red when the battery is about half way through its charge.
- The LED indicator will begin to flash rapidly in Red when the charge is low and will continue until the battery is completely drained.
- The LED indicator will remain Red when the battery is charging and will turn Green when the charging is completed.
- The LED indicator will continue to flash while the songs are being downloaded.
- The LED indicator will illuminate for 4 seconds and go out for 4 seconds continuously when it is in the *SLEEP* mode.

To Reset the System
When the device malfunctions, press the ⏮ and ⏭ buttons simultaneously and the device will force shut down and reset itself.

Trouble Shooting
- The LED indicator is functioning normally, but there is no sound: Check whether or not the earphone is plugged in and that the USB cable is still connected.
- When the device is not playing normally or behave abnormally when connected to the computer: Charge the device for approximately 30 minutes and then Reset the system.
- When the system is not playing normally and beeping sounds are heard when the device is turned on, remove some songs and then Reset the system.
- When songs are unable to play, check whether or not the songs are damaged or whether or not they are in DRM format.
- When the songs are not playing sequentially, add numbers starting with zero before their titles (example, 0001Let it Be, 0002Yesterday, 0003Hey Jude, etc.).

Description of Warranty
1. This quality device carries a limited one-year warranty from the date of purchase. It is issued only to the original purchaser against defects in workmanship under normal conditions of usage.
2. Parts and labor will be provided for repair within one year from the date of purchase assuming normal conditions of usage.
3. During the warranty period, a fee will be charged for repair if:
   - Damage or malfunction resulting from a natural disaster.
   - Repair work carried out by an unauthorized technician or company.
   - Damage or malfunction resulting from inappropriate usage or handling.
   - Inability to provide original purchase proof.
4. Others
   - Data stored on devices returned for repair may be lost. It is recommended that such data be stored in a separate device during repairs.
   - In certain circumstances, devices returned for repair may be replaced in their entirety.
   - The bicycle handlebar bracket is not covered by the warranty. Please note that riding on rough and/or bumpy roads may result the bracket in damage.

All Rights Reserved, Copyright © agios Technology Co.,Ltd.
www.podio.com.tw / www.agios.com.tw

Printed in Taiwan en-082010-00